

**SUPPLEMENT A8
TO THE AIRPLANE FLIGHT MANUAL DA 40**

**VHF COMMUNICATION/NAVIGATION
TRANSCEIVERS**

KX 155A and KX 165A

BENDIX/KING

Doc. No. : 6.01.01-E
Date of Issue of the Supplement : 01 Mar 2001
Design Change Advisory : OÄM 40-067 (KX 155A)
 OÄM 40-083 (KX 165A)

Signature

Authority

Stamp

Date of approval


 AUSTRO CONTROL GmbH
 Abteilung Flugtechnik
 Zentrale
 A-1030 Wien, Schnirchgasse 11
 02. JULI 2001

This Supplement has been approved for the Joint Aviation Authorities (JAA) by the Austrian Civil Aviation Authority Austro Control (ACG) as Primary Certification Authority (PCA) in accordance with the JAA Certification Procedures of the Joint Aviation Authorities (JAA JC/VP).

**DIAMOND AIRCRAFT INDUSTRIES GMBH
 N.A. OTTO-STR. 5
 A-2700 WIENER NEUSTADT
 AUSTRIA**

0.1 RECORD OF REVISIONS

Rev. No.	Reason	Chapter	Page(s)	Date of Revision	Approval	Date of Approval	Date Inserted	Signature
1	OÄM 40-067 (IFR) OÄM 40-083 (KX 165A)	all	all	20 Apr 2001	[approved by Ing. Andreas Winkler for ACG]	23 Apr 2001		
2	OÄM 40-083a (KX 165A/ 8.33 kHz)	0	9-A8-1 to 9-A8-3	03 Oct 2001				
		1 to 6	9-A8-4					
		7	9-A8-5 to 9-A8-7					

0.2 LIST OF EFFECTIVE PAGES

Chapter	Page	Date
0	9-A8-0	20 Apr 2001
	9-A8-1	03 Oct 2001
	9-A8-2	03 Oct 2001
	9-A8-3	03 Oct 2001
1, 2, 3, 4A, 4B, 5, 6	9-A8-4	03 Oct 2001
7	9-A8-5	03 Oct 2001
	9-A8-6	03 Oct 2001
	9-A8-7	03 Oct 2001
	9-A8-8	20 Apr 2001
	9-A8-9	20 Apr 2001
	9-A8-10	20 Apr 2001
	9-A8-11	20 Apr 2001
8	9-A8-12	20 Apr 2001

0.3 TABLE OF CONTENTS

	Page
1. GENERAL	9-A8-4
2. OPERATING LIMITATIONS	9-A8-4
3. EMERGENCY PROCEDURES	9-A8-4
4A. NORMAL OPERATING PROCEDURES	9-A8-4
4B. ABNORMAL OPERATING PROCEDURES	9-A8-4
5. PERFORMANCE	9-A8-4
6. MASS AND BALANCE	9-A8-4
7. DESCRIPTION OF THE AIRPLANE AND ITS SYSTEMS	9-A8-5
8. AIRPLANE HANDLING, CARE AND MAINTENANCE	9-A8-12

1. GENERAL

This Supplement supplies the information necessary for the efficient operation of the airplane when the COM/NAV #1 KX165A and COM/NAV #2 KX155A are installed. The information contained within this Supplement is to be used in conjunction with the complete AFM.

This Supplement is a permanent part of this AFM and must remain in this AFM all times when the KX155A and KX165A are installed.

2. LIMITATIONS

No change.

3. EMERGENCY PROCEDURES

DEFAULT MODE

Turning on the KX 155A or KX 165A while pressing either the COMM or NAV frequency transfer button will bring the unit up in the Direct Tune Mode.

120.00 MHz will be the active COMM frequency and 110.00 MHz will be the active NAV frequency. This will aid the pilot in blind tuning the radio in the unlikely event of display failure.

4A. NORMAL OPERATING PROCEDURES

No change.

4B. ABNORMAL OPERATING PROCEDURES

No change.

5. PERFORMANCE


No change.

6. MASS AND BALANCE


Upon removal or installation of the COM/NAV's the change of the empty mass and the corresponding center of gravity of the airplane must be recorded according to Chapter 6 of the Airplane Flight Manual.

7. DESCRIPTION OF THE AIRPLANE AND ITS SYSTEMS

7.14 AVIONICS

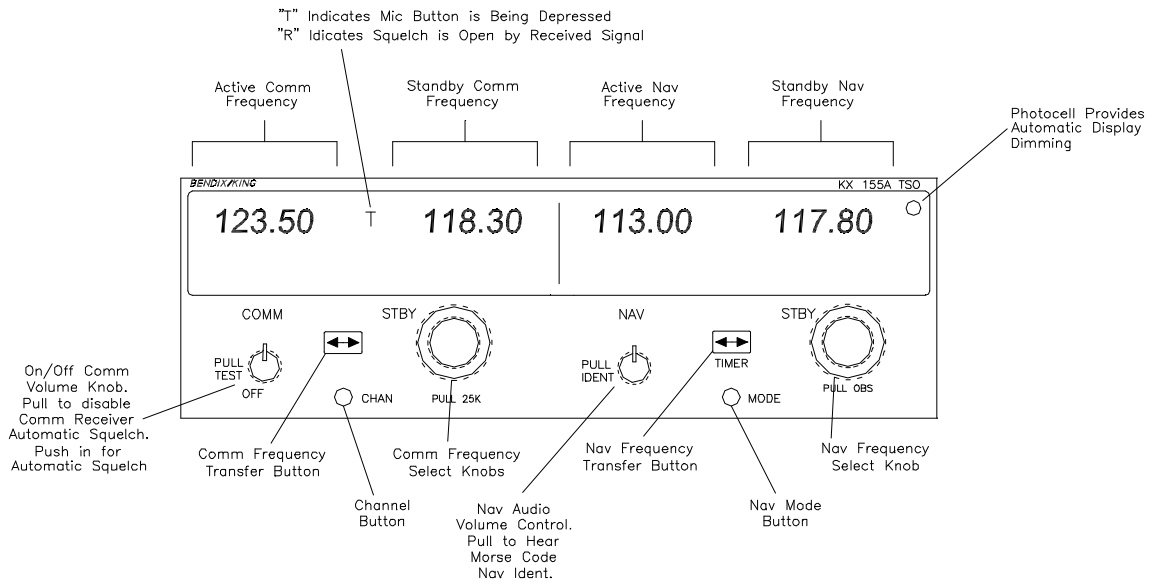

KX 155A and KX 165A (25 kHz Versions) CONTROL FUNCTION

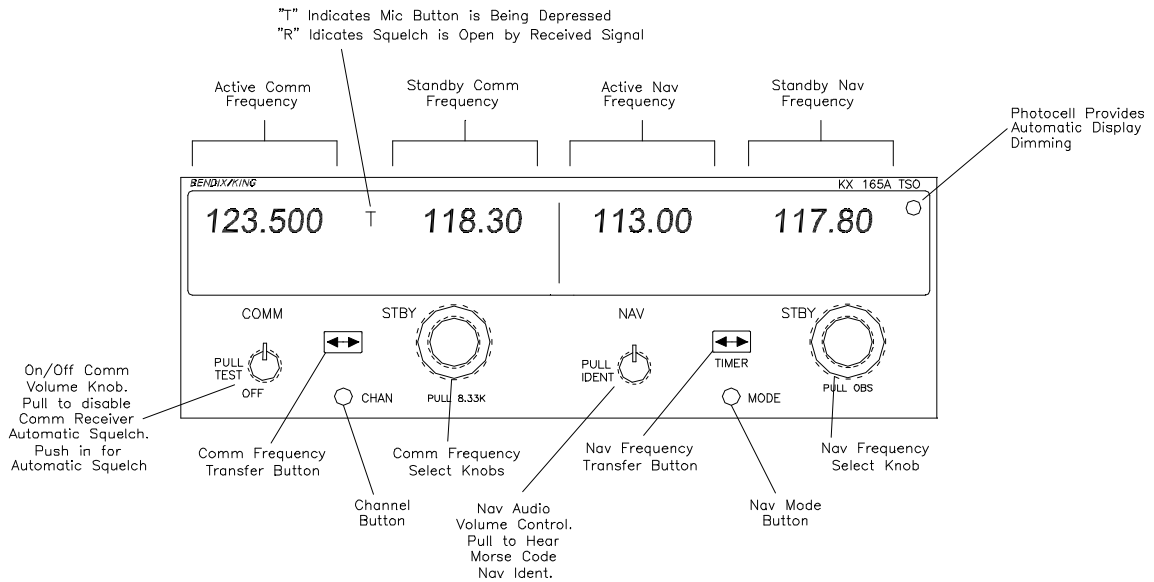

KX 165A (8.33 kHz Version) CONTROL FUNCTION

NOTE

The 25 kHz and 8.33 kHz versions of the KX 165A are distinguishable from one another in two ways. The 25 kHz version has 'PULL 25K' nomenclature below the COMM FREQUENCY SELECT knobs while the 8.33 kHz version has 'PULL 8.33K'. In addition, the 25 kHz version has two digits to the right of the decimal in the COMM frequency while the 8.33 kHz version has three digits to the right of the decimal. The 8.33 kHz channel spacing is required for flight in certain European (ICAO EUR Region) airspaces.

OPERATION

COM TRANSCEIVER

Rotate the VOL knob clockwise from the OFF position. Pull the VOL knob out and adjust for desired listening level. Push the VOL knob back in to actuate the automatic squelch.

The left portion of the digital display readout is allocated for COMM ACTIVE and COMM STANDBY frequencies with a 'T' between them to indicate TRANSMIT and a 'R' to indicate RECEIVE modes of operation.

Select the desired operating frequency in the standby display by rotating the Frequency Select Knobs either clockwise or counterclockwise. A clockwise rotation will increment the previous frequency while a counterclockwise rotation will decrement the previous frequency.

The outer knob will change the MHz portion of the standby display. At one band-edge (118 or 136 MHz) the following 1 MHz will wrap around to the other band-edge.

KX 155A and KX 165A 25 kHz Versions

The inner knob will change the kHz portion of the standby display. It will change in increments of 50 kHz when the knob is pushed in and 25 kHz when the knob is pulled out. The frequency wrap around at the edge of the band is also utilized when incrementing or decrementing the kHz portion of the standby display.

KX 165A 8.33 kHz Version

The inner knob will change the kHz portion of the standby display. It allows selection of 25 kHz frequencies only when the knob is pushed in and both 8.33 kHz and 25 kHz frequencies when the knob is pulled out. The frequency wrap around at the edge of the band is also utilized when incrementing or decrementing the kHz portion of the standby display.

To tune the radio to the desired operating frequency, the desired frequency must be entered into the standby display and then the transfer button must be pushed. This will trade the contents of the active and standby displays.

The operating frequency can also be entered by accessing the ACTIVE ENTRY (direct tune) mode which is done by pushing and holding the COMM TRANSFER button for 2 or more seconds. In the direct tune mode, only the active part of the display is visible. The desired frequency can be directly entered into the display. Push the COMM TRANSFER button again to return to the active/standby display.

The transceiver is always tuned to the frequency appearing in the ACTIVE display. It is therefore possible to have two different frequencies stored in the ACTIVE and STANDBY displays and to change back and forth between them at the simple push of the transfer button.

During the transmit mode of operation, a 'T' will appear between the ACTIVE and STANDBY displays. AN 'R' will appear between the ACTIVE and STANDBY displays if a detected signal is strong enough to open the squelch, signifying that the transceiver is in the receive mode of operation.

A non-volatile memory stores the comm ACTIVE and STANDBY frequencies on power down. When the unit is turned on again, the COMM ACTIVE and STANDBY windows will display the same ACTIVE and STANDBY frequencies that were displayed before power down.

The KX 155A and KX 165A also have provisions to program 32 channels. Pressing the CHAN button for 2 or more seconds will cause the unit to enter the channel program mode. Upon entering the channel program mode, 'PG' is displayed next to the channel number and the channel number will flash indicating that it can be programmed.

The desired channel can be selected by turning the comm kHz knob. The channel frequency can be entered by pushing the COMM TRANSFER button which will cause the standby frequency to flash. The comm frequency knobs are then used to enter the desired frequency. If dashes (displayed when rotating the outer knob between 136 MHz and 118 MHz) are entered instead of a frequency, the corresponding channel is skipped in channel selection mode. Additional channels may be programmed by pressing the COMM TRANSFER button and using the same procedure. To exit the program mode and save the channel information, momentarily push the CHAN button.

This will cause the unit to return to the previous frequency entry mode. The unit will also exit the channel program mode if there is no button or knob activity for 20 seconds.

The channel selection mode can then be entered by momentarily pushing the CHAN button. 'CH' is displayed next to the last used channel number.

NOTE

If no channels have been programmed, channel 1 appears with dashes displayed.

The comm frequency knobs can be used to select the desired channel. The unit will automatically exit the channel mode, with the channel frequency remaining in the STANDBY window, if no channel is selected within 5 seconds after entering the channel selection mode. The channel frequency is then made the ACTIVE frequency in the normal manner by pressing the COMM TRANSFER button.

The unit is placed in the transmit mode by depressing the MIC KEY button. The unit has a stuck microphone alert feature. If the microphone is keyed continuously for greater than 33 seconds, the transmitter stops transmitting and the active COMM frequency flashes to alert the pilot of the stuck microphone condition.

NAV RECEIVER

The right portion of the display is allocated to NAV receiver information. The frequency channeling is similar to the COMM when operating in the frequency mode. The NAV increment/decrement knobs are located on the right-hand side of the front panel. The outer knob operates in 1 MHz steps and increments/decrements the STANDBY frequency display.

The inner knob operates in 50 kHz steps. The NAV receiver's lower and upper frequency limits are 108.00 MHz and 117.95 MHz. Exceeding the upper limit of the frequency band will automatically return to the lower limit and vice versa.

Depressing the NAV frequency transfer button for 2 seconds or more will cause the display to go into the ACTIVE ENTRY mode. Only the ACTIVE frequency will be displayed and it can be directly changed by using the NAV inc/dec knobs. The display will return to the ACTIVE/STANDBY mode when the NAV frequency transfer button is pushed.

Depressing the mode button will cause the NAV display to change from the ACTIVE/STANDBY format to the ACTIVE/CDI (Course Deviation Indicator) format. The vertical 'needle' moves side to side similar to mechanical CDI. When the needle is centered, the airplane is on the selected OBS course. When the active frequency is tuned to a VOR frequency, the center of the CDI scale displays the 'TO' or 'FROM' indicator.

In the CDI mode, the increment/decrement knob (pushed in) channels the ACTIVE frequency window and depressing the frequency transfer button will cause the ACTIVE frequency to be placed in blind storage and the STANDBY frequency (in blind storage) to be displayed in the ACTIVE window display.

When the ACTIVE window is tuned to a VOR frequency, the standby frequency area is replaced by a three digit OBS (Omni Bearing Selector) display. The desired OBS course can be selected by pulling out the inner NAV frequency knob and turning it. The CDI needle may be automatically centered with a 'TO' indication by depressing the mode button for 2 seconds. This OBS display is independent of any OBS course selected on an external CDI or HSI. An 'OBS' in the middle of the NAV display will flash while the inner NAV frequency knob is pulled out. The CDI is displayed on the line below the frequency/OBS.

When the ACTIVE window is tuned to a localizer frequency, the standby frequency area is replaced by 'LOC'.

When the received signal is too weak to ensure accuracy the display will 'flag'.

Depressing the mode button will cause the NAV display to go from the ACTIVE/CDI format to the ACTIVE/BEARING format.

In the BEARING mode, the increment/decrement knob channels the ACTIVE frequency window and depressing the frequency transfer button will cause the ACTIVE frequency to be placed in blind storage and the STANDBY frequency (in blind storage) to be displayed in the ACTIVE window display. In bearing mode of operation, the right-hand window of NAV display shows the bearing TO the station.

When a too weak or invalid VOR signal is received the display will flag.

Another push of the mode button will cause the NAV display to go from the ACTIVE/BEARING format to the ACTIVE/RADIAL format. In the RADIAL mode, the increment/decrement knob channels the ACTIVE frequency window and depressing the frequency transfer button will cause the ACTIVE frequency to be placed in blind storage and the STANDBY frequency (in blind storage) to be displayed in the ACTIVE window display. In radial mode of operation, the right-hand window of NAV display shows the radial FROM the station.

When a too weak or invalid VOR signal is received the display will flag.

Another push of the mode button will cause the unit to go into the TIMER mode. When the unit is turned on, the elapsed timer begins counting upwards from zero. The timer can be stopped and reset to zero by pushing the NAV frequency transfer button for 2 seconds or more causing the ET on the display to flash. In this state the timer can be set as a countdown timer or the elapsed timer can be restarted. The countdown timer is set by using the NAV inc/dec knobs to set the desired time and then pushing the NAV frequency transfer button to start the timer. The outer knob selects minutes, the inner knob in the 'in' position selects ten second intervals, and the inner knob in the 'out' position selects individual seconds.

After the countdown timer reaches zero, the counter will begin to count upwards indefinitely while flashing for the first 15 seconds. Or the elapsed timer can also be reset to zero and started again after it has been stopped and reset to zero by pushing the NAV frequency transfer button. The Audio Alert is then sounded.

The NAV ACTIVE and STANDBY frequencies are stored in the memory on power down and return on power up.

When the smaller increment/decrement knob is pushed in, depressing the NAV TRANSFER button will interchange the ACTIVE and STANDBY frequencies. The NAV IDENT knob is active in the pulled out position so that both voice and ident can be heard. When this knob is pushed in, the ident tone is attenuated. The volume of voice/ident can be adjusted by turning this knob.

PILOT CONFIGURATION

This mode can be accessed by pressing and holding the Nav Mode Button for more than 2 seconds and then pressing the Nav Frequency Transfer Button for an additional 2 seconds, while continuing to hold the Nav Mode Button. When the Pilot Config Mode is entered, the unit will show the 'SWRV' mnemonic which is the unit software revision level. Adjustment pages can be accessed by MODE button presses.

The pilot may adjust two parameters in the pilot configuration, the display minimum brightness and sidetone volume level.

Minimum Brightness (BRIM) will have a range of 0 - 255. The dimmest is 0 and the brightest is 255.

Sidetone volume level is adjusted when SIDE is displayed. Values from 0 - 255 may be selected with 0 being least volume, 255 being the greatest.

Subsequent presses of the MODE button sequences through SWRV, BRIM, SIDE, and then back to SWRV.

Momentarily pressing the Nav Transfer Button exits the Pilot configuration mode. The Nav returns to its pre-Pilot Config state with the new brightness and sidetone levels stored in non-volatile memory.

8. AIRPLANE HANDLING, CARE AND MAINTENANCE

No change.