

TEMPORARY REVISION

AMM-TR-MÄM 42-1296

Correction of Additional Alternator Information

This Temporary Revision AMM-TR-MÄM 42-1296 is approved in conjunction with the Mandatory Design Change Advisory MÄM 42-1296 and is valid in conjunction with the Airplane Maintenance Manual (AMM) until this Temporary Revision has been incorporated into the AMM, latest revision.

The limitations and information contained herein either supplement or, in the case of conflict, override those in the AMM.

The technical information contained in this document has been approved under the authority of DOA No. EASA.21J.052.

Doc. No.	Section	Affected Pages
7.02.15	24-33-00	203a, 204a
	61-10-00	213a, 214a, 215a, 215aa
	71-00-00	209a, 209aa, 210a, 210aa

Instruction

- Print this document double-sided on yellow paper (odd pages and "a" pages on front sides, even pages and "aa" pages on reverse sides).
- Insert this cover page as the first page of the AMM.
- Insert the other pages of this Temporary Revision in front of the corresponding AMM pages.





Intentionally left blank





Page 203a

12 Oct 2023

24-33-00

AFFECTED CHAPTERS:

CHAPTER 24 ELECTRICAL POWER Section 24-33-00 Additional Alternator Maintenance Practices

The paragraph is amended to read:

4. Remove/Install the Voltage Regulator


A. Remove the Voltage Regulator

	Detail Steps/Work Items	Key Items/References			
١	WARNING: MAKE SURE THAT THE ENGINES ARE SAFE BEFORE YOU DO ANY WORK ON THE VOLTAGE REGULATOR. IF THE ENGINE IS TURNED, THE PROPELLER CAN CAUSE INJURY OR DEATH.				
(3)	Disconnect the voltage regulator harness.	Refer to Section 61-10.			
(4)	Remove the two attachment bolts of the voltage regulator.				



B. Install the Voltage Regulator

		Detail Steps/Work Items	Key Items/References	
WOR		ARNING: MAKE SURE THAT THE ENGINES ARE SAFE BEFORE YOU DO ANY ORK ON THE VOLTAGE REGULATOR. IF THE ENGINE IS TURNED, THE COPELLER CAN CAUSE INJURY OR DEATH.		
	(2)	Position the voltage regulator on the voltage regulator support.	Refer to Section 61-10.	
	(3)	Install the two bolts which attach the voltage regulator on the voltage regulator support.		
	(4)	Connect the electrical wiring harness to the voltage regulator.	Refer to Section 24-33.	

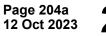

Page 204a 12 Oct 2023 **24-33-00**



CHAPTER 61 PROPELLER Section 61-10-00 Propeller Assembly Maintenance Practices

5. Remove/Install the Additional Alternator V-Belt (if OÄM 42-204 is installed)



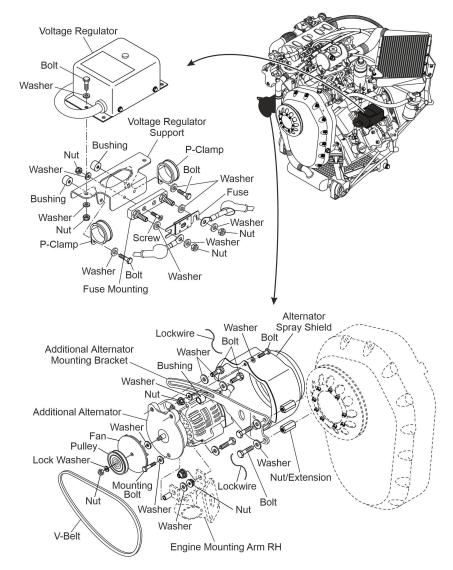


Figure 6: Additional Alternator and Voltage Regulator (if OÄM 42-204/e or earlier is installed)

Doc # 7.02.15 AMM-TR-MÄM 42-1296

61-10-00

Page 213a 12 Oct 2023



Figure 7 is amended to read:

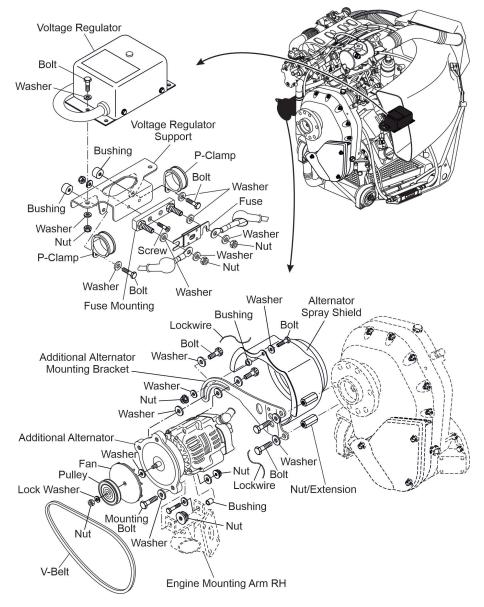


Figure 7: Additional Alternator and Voltage Regulator Installation (if OÄM 42-204/g or later and MÄM 42-600 are installed)





Page 215a

12 Oct 2023

Figure 8 is amended to read:

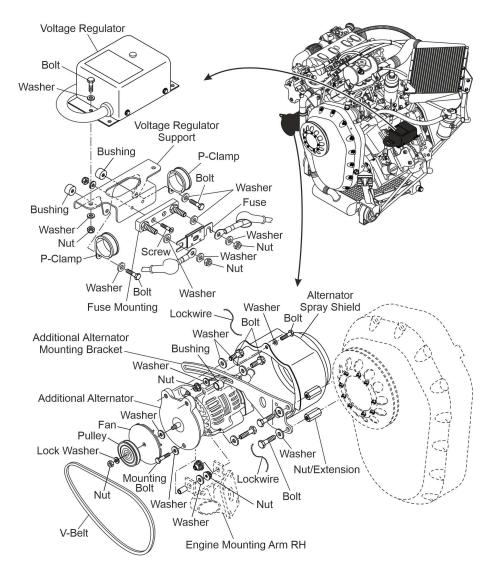


Figure 8: Additional Alternator and Voltage Regulator Installation (if OÄM 42-204/o or later is installed and MÄM 42-600 is NOT installed)

61-10-00



Intentionally left blank


Page 215aa 12 Oct 2023 61-10-00



CHAPTER 71 POWER PLANT Section 71-00-00 Maintenance Practices

2. Remove/Install the Engine

B. Remove the Engine without Cable Harness

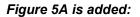

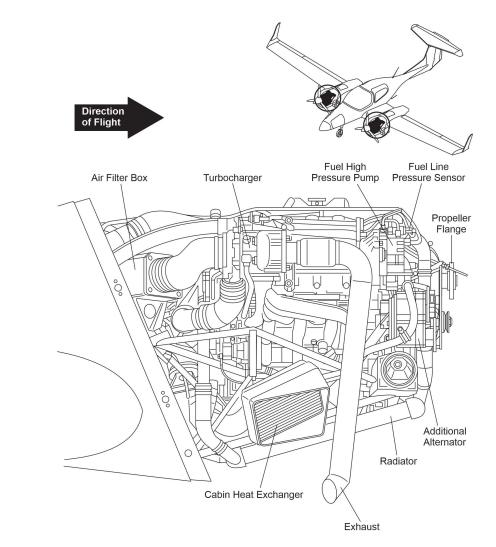


Figure 5A: Right Side of Engine (if the Additional Alternator is installed)

Doc # 7.02.15 AMM-TR-MÄM 42-1296

71-00-00

Page 209a 12 Oct 2023



Intentionally left blank

Page 209aa 71-00-00



Figure 6A is added:

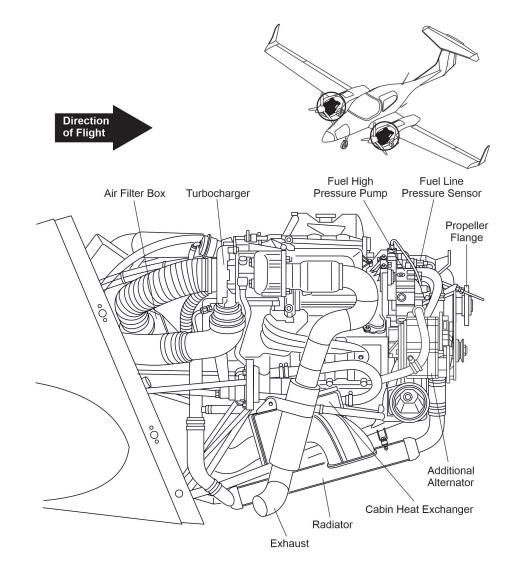


Figure 6A: Right Side of Engine (if the Additional Alternator and MÄM 42-600 are installed)

Doc # 7.02.15 AMM-TR-MÄM 42-1296

61-10-00

Page 210a 12 Oct 2023



Intentionally left blank

Page 210aa 71-00-00