

# TEMPORARY REVISION

## TR-MÄM 62-1035

### PARKING BRAKE PROCEDURE & COMANT CI 105-16 ANTENNA

This temporary revision TR-MÄM 62-1035 is approved in conjunction with the Mandatory Design Change Advisory MÄM 62-1035, and is valid in conjunction with the latest revision of the DA 62 Airplane Flight Manual (AFM), until this temporary revision has been incorporated into the AFM.

The limitations and information contained herein either supplement, or in the case of conflict, override those in the AFM.

The technical information contained in this document has been approved by the Canadian Department of Transport.

Doc. No.	Chapter	Affected Pages
11.01.05-E	4A	4A-26a, 4A-32a, 4A-64a
	6	6-25a
	7	7-18a

#### Instructions:

- Print this document on 8.5" x 11" yellow paper (single sided).
- Copy on yellow paper (single sided) at a reduced size of 72% to get the correct size for the AFM.
- Cut the paper to 6" x 8.5" and punch the holes on the left side of each page.
- Insert the cover page as the first page of the AFM.
- Insert the pages of this temporary revision in front of the corresponding pages in the AFM.
- Sign the Temporary Revision Log as having inserted this temporary revision.
- Keep this temporary revision until the information has been incorporated into the DA 62 AFM.

**4A.6.5 TAXIING**

*The item 1 is amended to read:*

1. Parking brake . . . . . apply toe pressure to the brakes, and  
release the parking brake lever

**4A.6.6 BEFORE TAKE-OFF**

*ECU/fuel pumps test sequence*

A. Under 7500 ft

***The item 15 is amended to read:***

15. Parking brake . . . . . apply toe pressure to the brakes, and  
release the parking brake lever

#### **4A.6.17 PARKING**

*Item 1 is amended to read:*

1. Parking brake . . . . . apply toe pressure to the brakes, and release the parking brake lever, use chocks

## 6.5 EQUIPMENT LIST AND EQUIPMENT INVENTORY

*The following is added to the existing table:*

Airplane Serial No.:		Registration:		Date:		Mass		Lever Arm	
Description	Type	Part No.	Manufacturer	S/N	Installed	lb	kg	in	m
<b>COMMUNICATION/NAVIGATION</b>									
Transponder antenna	CI 105-16		Comant			0.200	0.091		
DME antenna	CI 105-16		Comant			0.200	0.091		

## 7.5 LANDING GEAR

### Parking Brake

*The following paragraph is amended to read:*

The lever is located on the small center console under the instrument panel and is in the upper position when the brakes are released. To operate the parking brake, pull the lever downwards until it catches. Brake pressure is built up by multiple operation of the toe brake pedals, and is maintained until the parking brake is released. To release, apply toe pressure to the brakes, and push the lever upwards.