SUPPLEMENT NO. 1

to the Flight Manual for the Powered Sailplane

HK 36 R "SUPER DIMONA"

for the Use as Tow-Plane

Date of Issue: May 24, 1994

Pages identified by "ACG-appr." are approved by:

AUSTRO CONTROL (ACG)

Authority:

Signature:

Stamp:

Date of Approval:

The powered sailplane is to be operated in compliance with the information and limitations contained herein.

1: July 11, 1994

0.2. LIST OF EFFECTIVE PAGES

Section	Page 1	No.	Date YY-MM-DD
0		9-1-1 9-1-2 9-1-3	94-05-24 94-05-24 94-05-24
1		9-1-4 9-1-5	94-05-24 94-05-24
2	ACG-appr. ACG-appr.		94-05-24 94-05-24
3	ACG-appr.	9-1-8	94-05-24
4	ACG-appr. ACG-appr.		94-05-24 94-05-24
5	ACG-appr.	9-1-11 9-1-12	94-05-24 94-05-24
6		9-1-13 9-1-14	94-05-24 94-05-24
7		9-1-15	94-05-24
8		9-1-16	94-05-24

Change No.	Date	Source	Issue	Page No.	
		c	1994-05-24	9-1-2	

0.3. TABLE OF CONTENTS

1. GENERAL

1.1. 1.2. 1.5. 1.6.	INTRODUCTION	9-1-4 9-1-4
2. LIMITAT	TONS	
2.14.	AIRSPEED	9-1-6 9-1-6 9-1-7 9-1-7
3.7. 3.9. 3.10.	ENGINE FAILURE	9-1-8 9-1-8
J.10.	THE SAILPLANE	9-1-8
4. NORMAL	PROCEDURES	
4.3. 4.5.	DAILY INSPECTION	9-1-9
	4.5.2. Take-off and Climb 4.5.5. Landing	9-1-9 9-1-10
5. PERFORM	ANCE	
5.2.	ACG-APPROVED DATA 5.2.3. Take-off Performance ADDITIONAL INFORMATION	9-1-11
5.3.	5.3.5. Climb Performance	9-1-12
6. MASS (W	EIGHT) AND BALANCE / EQUIPMENT LIST	
6.1. 6.9.	INTRODUCTION	9-1-13 9-1-13
7. POWERED	SAILPLANE AND SYSTEMS DESCRIPTION	
	COCKPIT	9-1-15 9-1-15
8. POWERED	SAILPLANE HANDLING, CARE AND MAINTENANCE	
8.2.	POWERED SAILPLANE INSPECTION PERIODS 8.2.1. Inspection Periods for the Towing Device	9-1-16

Change No.	Date	Source	Issue	Page No.
			1994-05-24	9-1-3

1. GENERAL

1.1. INTRODUCTION

Pages 9-1-1 through 9-1-16 constitute Supplement No. 1 to the Flight Manual for the Powered Sailplane HK 36 R "SUPER DIMONA" and are valid only for the operation of the powered sailplane as a towplane.

1.2. CERTIFICATION BASIS

Tow-plane operation of this airplane has been approved in accordance with the draft of the LBA airworthiness requirements for tow-plane operation dated February 1971.


1.5. DESCRIPTIVE DATA

The towing device E 85 manufactured by Tost is attached to the tail wheel assembly and fuselage tube by means of a steel fitting specially designed for the SUPER DIMONA. The tow-rope is released through a cable mechanism connected to a release lever in the cockpit.

For tow-plane operation, an additional rear mirror must be attached to the left wing using adhesive linen tape (see three-view drawing, page 9-1-5).

Change No.	Date	Source	Issue	Page No.	
			1994-05-24	9-1-4	

1.6. THREE-VIEW DRAWING

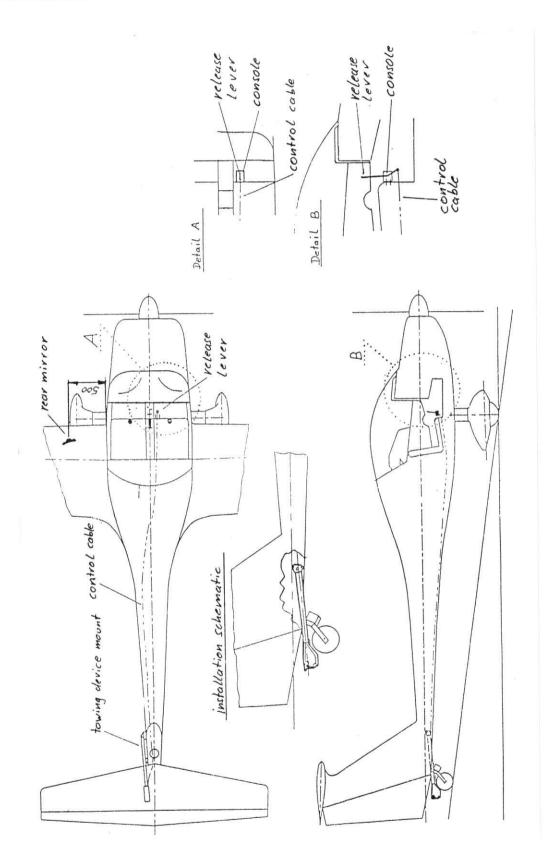

Change No.	Date	Source	Issue	Page No.	
			1994-05-24	9-1-5	

2. LIMITATIONS

2.2. AIRSPEED

NOTE

All airspeeds given in this Supplement are to be understood as indicated airspeeds (IAS).

The maximum permissible speed for tow-plane operation is 135 km/h (73 kts./84 mph) or the maximum permissible towing speed of the towed sailplane, whichever is less. The minimum permissible speed for the train is 90 km/h (49 kts./56 mph) or 1.2 times $v_{\rm S1}$ of the towed sailplane, whichever is higher.

2.6. MASS (WEIGHT)

Tow-plane operation:

The flight mass of the sailplane to be towed must not exceed 370 kg (816 lbs.). The maximum take-off mass of the tow-plane is 720 kg (1587 lbs.).

Change No.	Change No. Date		Issue	Page No.
			1994-05-24	9-1-6

2.10. FLIGHT CREW

When used as a tow-plane, the HK 36 R must be flown by a solo-pilot.

For instruction purposes, a flight crew of two is permissible, provided that the total mass of the train does not exceed 1090 kg (2403 lbs.).

2.14. OTHER LIMITATIONS

Banner-towing operation

The drag of the banner must not exceed 70 daN (157 lbs.) at an airspeed of 135 km/h (73 kts./84 mph).

Should no drag data be available, the banner must be tested in accordance with a test program agreed upon with the competent authority.

Low-drag banners with areas up to 40 m^2 (430 sq.ft.) have been tested.

Change No.	Date	Source	Issue	Page No.
			1994-05-24	9-1-7

3. EMERGENCY PROCEDURES

3.7. ENGINE FAILURE

- Release tow-rope or advise sailplane pilot (via radio or by giving signs) to release.
- Proceed according to Emergency Procedures in main part of Flight Manual.

3.9. OTHER EMERGENCIES

Abnormal Position of Towed Sailplane

If maneuverability is no longer given due to an abnormal position of the towed sailplane, the tow-rope must be released immediately.

If the towed sailplane is apparently outside of a 60 degree cone behind the tow-plane (i.e. if the angle between the tow-rope and the longitudinal axis of the tow-plane exceeds 30 degrees), the tow-rope must be released immediately.

3.10. FAILURE OF THE RELEASE DEVICE ON THE SAILPLANE

Landing of the complete train is possible with the sailplane's air brakes fully extended and the rate of descent being controlled via the power setting of the tow-plane.

WARNING

During tow-plane operation, the air brakes of the tow-plane must not be extended!

Change No.	Change No. Date		Issue	Page No.
			1994-05-24	9-1-8

4. NORMAL PROCEDURES

4.3. DAILY INSPECTION

- Check towing device and release mechanism for excessive dirt and improper operation (release test).

4.5. NORMAL PROCEDURES AND RECOMMENDED SPEEDS

4.5.2. Take-off and Climb

CAUTION

When towing sailplanes with high wing loading, acceleration must be performed close to the ground, because the take-off speed of the sailplane may exceed the take-off speed of the tow-plane.

For maximum gradient of climb, fly with 95 km/h (51 kts., 59 mph). For maximum rate of climb, fly with 105 km/h (57 kts., 65 mph). When towing sailplanes with high wing loading and/or in turbulent air, tow-speeds up to 120 km/h (65 kts., 75 mph) are recommended.

CAUTION

The banner is picked up in flight with a catch rope pulled behind the tow-plane. A suitable hook must be used (with turned back ends, see equipment list) to avoid getting caught on the ground.

Change No.	Date	Source	Issue	Page No.	
			1994-05-24	9-1-9	

4.5.5. Landing

- Prior to landing, drop tow-rope or banner.
- Check caution light to verify proper releasing.
- Proceed according to Normal Procedures in main part of Flight Manual.

Landing with the tow-rope attached is only possible when the approach path is clear of any obstacles and with increased approach speed.

Change No.	Date	Source	Issue	Page No.
			1994-05-24	9-1-10

5. PERFORMANCE

5.2. ACG-APPROVED DATA

5.2.3. Take-off Performance

s1 ... Take-off roll

s2 ... Take-off distance to clear a 15 m (49 ft.) obstacle

			Pressure altitude [m]/[ft.] Atmospheric pressure [hPa] = [mbar]						
		0/0 1013			/1310 56	800 <i>/2620</i> 921		1200/3940 877	
Headwind Component	OAT [°C] [°F]	s1 [m] [ft.]	s2 [m] [ft.]	s1 [m] [ft.]	s2 [m] [ft.]	s1 [m] [ft.]	s2 [m] [ft.]	s1 [m] [ft.]	s2 [m] [ft.]
	0	232	495	262	553	297	618	338	695
	32	761	1624	860	1814	974	2028	1109	2280
0 km/h	15	265	560	302	626	342	702	391	792
0 kts.	59	869	1837	991	2054	1122	2303	1283	2598
	30	304	631	345	708	394	796	450	900
	86	997	2070	1132	2323	1293	2612	1476	2953
	0	181	417	206	466	235	524	270	591
	32	594	1368	676	1529	77 <i>1</i>	1719	886	1939
9 km/h	15	209	474	239	530	273	598	313	675
5 kts.	59	686	1555	784	1739	896	1962	<i>1027</i>	2115
	30	240	535	275	602	316	679	364	770
	86	787	1755	902	1975	1037	2228	1194	2526

CAUTION

The values given above do not include any reserve. For a safe take-off, the available runway length must at least be equal to the take-off distance over a 15 m (49 ft.) obstacle.

Change No.	Date	Source	Issue	Page No.
			1994-05-24	9-1-11

5.3. ADDITIONAL INFORMATION

5.3.5. Climb Performance

When towing a sailplane with a mass of 370 kg (816 lbs.), the maximum rate of climb is 2.3 meters per second (450 f.p.m.) at sea level in standard atmosphere.

Change No.	Date	Source	Issue	Page No.
			1994-05-24	9-1-12

6. MASS (WEIGHT) AND BALANCE / EQUIPMENT LIST

6.1. INTRODUCTION

For the operation of the HK 36 R as a tow-plane, the permissible empty mass CG range and the permissible CG range during flight remain unchanged. The loading restrictions under 2.6 and 2.10 of this Supplement no. 1 must be observed.

6.9. EQUIPMENT LIST

Additional Equipment for Tow-Plane Operation

- 1 Tost towing device E 85
- 1 Fitting, Dwg. No. 820-2550-00-00, Sheet 2
- 1 Release mechanism
- 1 Caution light (amber)

NOTE

The following equipment is not taken into account for CG determination, is however required for the respective kind of operation.

Sailplane Towing

- 1 Tow-rope 1)
- 1 Pair of connection rings complying with LN 65091
- 1 Breaking piece: Ultimate load 300 daN (674 lbs.), green

or 400 daN (899 lbs.), yellow

1 Rear mirror

Change	No.	Date	Source	Issue	Page No.
				1994-05-24	9-1-13

Banner Towing

- 1 Catch rope
- 1 Catch hook with turned back ends (Holland Aviation, part no. 1607, or equivalent).
- 1 Pair of connection rings complying with LN 65091
- 1 Breaking piece: Ultimate load 300 daN (674 lbs.), green
- 1 Rear mirror

CAUTION

The pilot must ensure that the proper breaking piece (see above) is installed in the tow-rope, as the airplane structure may be overstressed otherwise.

1) Partial translation of the applicable airworthiness requirements (see paragraph 1.2 of this Supplement 1):

2.8. Tow-Rope and Breaking Piece

Only plastic ropes may be used, e.g. polyamide, polyester, polypropylene, etc. in accordance with aeronautical standards, DIN standards or factory specifications, provided these standards (specifications) contain sufficient data and ensure delivery with continuous quality. The rope connections should be suitably covered to provide wear protection.

[...] In case of ropes with a higher ultimate load, a breaking piece with an adequate breaking load must be included in order to protect the tow-plane. At the permissible load on the rope, the strain of the rope should not exceed 30 %.

For sailplane towing, the rope length should be 40 to 60 meters [130 to 200 ft.], for banner towing it should be approximately 20 meters [65 ft.].

The holder of the tow-plane is responsible for selection, use, and maintenance of the tow-rope.

Change No.	Date	Source	Issue	Page No.
			1994-05-24	9-1-14

7. POWERED SAILPLANE AND SYSTEMS DESCRIPTION

7.8. COCKPIT

The release lever for the towing device is colored yellow and is located to the right of the throttle quadrant. It should have a dead travel of approximately 10 millimeters (0.4 inches). By pulling on the lever, the rope is released.

The caution light is installed in the center section of the instrument panel. It is illuminated as long as the tow-rope is held by the towing device.

7.14. PLACARDS / INSCRIPTIONS

The following additional placards are installed for tow-plane operation of the HK 36 R:

Next to the caution light for the tow-rope:

Tow-Rope

On the release lever:

Tow-Rope Release

Change No.	Date	Source	Issue	Page No.
			1994-05-24	9-1-15

8. POWERED SAILPLANE HANDLING, CARE AND MAINTENANCE

8,2. POWERED SAILPLANE INSPECTION PERIODS

8.2.1. Inspection Periods for the Towing Device

At each 100 hour inspection, the system must be cleaned, lubricated, and checked for poor condition and improper operation.

The towing device must be overhauled every 4 years or after 4000 tows, whichever comes first.

Change No.	Date	Source	Issue	Page No.
			1994-05-24	9-1-16