

COVER PAGE TO TEMPORARY REVISION AMM-TR-OÄM 36-370 New Fire Extinguisher

This Temporary Revision AMM-TR-OÄM-36-370 is approved in conjunction with the Optional Design Change Advisory OÄM 36-370/a and is valid in conjunction with the Maintenance Manual in the Revision as mentioned below.

The limitations and information contained herein either supplement or, in the case of conflict, override those in the Maintenance Manual.

The technical information contained in this document has been approved under the authority of DOA No. EASA.21J.052.

Affected Pages:

Doc. No.	Rev.	Page
3.02.21	11	0.7a, 3.2a, 3.4a, 3.14a, 4.39

Instruction:

- * Print this Temporary Revision on yellow paper.
- * Insert pages of Temporary Revision in front of the corresponding original manual pages.
- * Insert this Cover Page as first page of the Manual.

Affected Chapters:**0.2 TABLE OF CONTENTS**

The following headline is added to the table of contents:

4.8 MAINTENANCE PRACTICE. 4.31

I 4.8.6 REPLACEMENT OF THE FIRE EXTINGUISHER AMEREX 337TS. 4.39

Doc. No.	Issue	OÄM	Date	Page
3.02.21	17 May 1993	36-370/a	02 Oct 2023	0.7a

3.1.2. REFERENCED MAINTENANCE DATA

The following item is added to the list:

Supplier	Doc. Name	Doc. No.
Amerex Corp.	Owners Service Manual, Installation, Operating & Servicing Instructions	05602

Doc. No.	Issue	OĂM	Date	Page
3.02.21	17 May 1993	36-370/a	02 Oct 2023	3.2a

3.1.3 MAINTENANCE REQUIREMENTS AND COMPONENT TIME LIMITS

The following item is added to the table:

Component	Time Limit
Fire extinguisher Amerex 337TS	12 years after production date as shown on the label of the fire extinguisher.

3.1.4 ACCOMPLISHMENT OF MAINTENANCE WORK

C. AIRFRAME

The following item is added to the table:

HK 36 Series Maintenance Checklist		Interval		
No.	Inspection Items	100	200	1000
3. Cabin				
3.22	Examine the fire extinguisher: <ul style="list-style-type: none"> – Make sure that the fire extinguisher will release from the fire extinguisher mount. – Look for physical damage, corrosion, leakage or clogged nozzle. – Examine the fire extinguisher label for damage. – Make sure that the tamper seal is not broken. – Make sure that the container of the fire extinguisher is full: – Use the pressure gauge to examine the pressure. The pressure must be in the green arc. – If the fire extinguisher Amerex 337TS (OÄM 36-370/a) is installed: Examine the weight of the fire extinguisher. Refer to the maintenance description on the fire extinguisher label. 	o	o	o

The following procedure is added:

4.8.6. REPLACEMENT OF THE FIRE EXTINGUISHER AMEREX 337TS

1. Weigh the new fire extinguisher Amerex 337TS without the fire extinguisher mount.
This weight is the initial weight.
2. Record the initial weight on the bottom of the new fire extinguisher with two decimal places (for example: 1.34 kg (2.95 lb)).
Use a permanent black marker.

Doc. No.	Issue	OÄM	Date	Page
3.02.21	17 May 1993	36-370/a	02 Oct 2023	4.39